



Designed and Made
in Australia

SUPERWHEELS®

AN ATTACHMENT FOR YOUR *PETROL POWERED* LINE TRIMMER


PATENTS PENDING: US12231042 GB0817252.0

www.tandtdesign.com.au




Users of this attachment do so at their own risk. The manufacturers and suppliers will not take responsibility for personal injury or property damage resulting from inappropriate use, or incorrect use of this attachment. Tampering with this attachment, or modifying this attachment voids all claims on the supplier and manufacturer.

1. Assembly - Legs to central housing

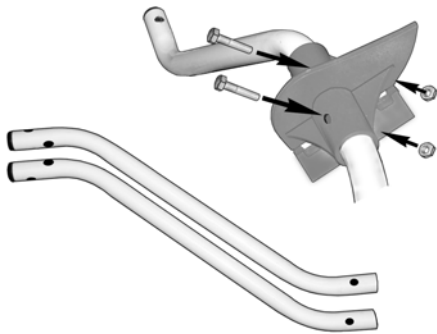


Attach each arm using the supplied bolts and nuts - single hole end into plastic housing.

NOTE: There is a *Right Hand* arm and *Left Hand* arm - When they are assembled correctly they sweep forward.

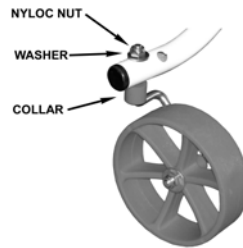


2. Complete the assembly

by adding the castor wheels. Tighten the nut firmly (but do not restrict free movement of castor).

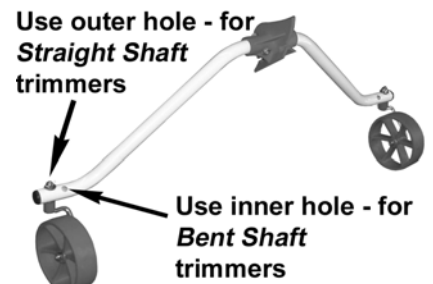

Straight shaft trimmer

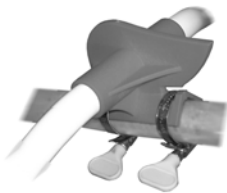

3. Fitting to Line Trimmer

Undo the clamps and re-engage around the trimmer shaft.

Tighten the clamps.



Bent shaft trimmer

4. Using SUPERWHEELS®

Adjust the cutting height of your SUPERWHEELS by loosening the clamps and sliding the unit up/down the shaft - then re-tighten the clamps.

Use SUPERWHEELS as an edge trimmer, or a lawn mower (you can also angle the cutting head for more convenient working along driveway or path edging).



NOTE:- start with a high cut position (SUPERWHEELS close to cutting head)

www.tandtdesign.com.au
- See other great innovative products -

Warranty

This product is covered by warranty providing the nature of the claim is the result of faulty workmanship. Misuse or abuse voids all warranty. Warranty claims must be reported to the Selling Agent from whom it was originally purchased. The warranty is valid for a period of ninety days starting from the purchase date. The warranty will be void if any unauthorised persons tamper with the product or parts.